



MIGA101-3-VALVE-AB



1. Operating instructions – M101P/02/C IR Receiver

1.1 On/Off

- When the remote control is not available, press and hold the ON/OFF button to switch the A/C unit ON or OFF.
- The unit remembers its previous settings and when being turned on, it will automatically return to it.



1.2 LEDs Indication


Green LED "ON"

- Turns on when A/C unit is active.
- Flashes during 4 Minutes compressor delay.
- Flashed (with green LED) during alarm indication.

Red LED "TIMER"

- Turns on when the ON/OFF Timer is active.
- Flashes when returning from a power break down and the timer was active.
Note: the timer will not resume and where required should be set again.
- Flashed (with red LED) during alarm indication.

2. RT03 – Remote control unit

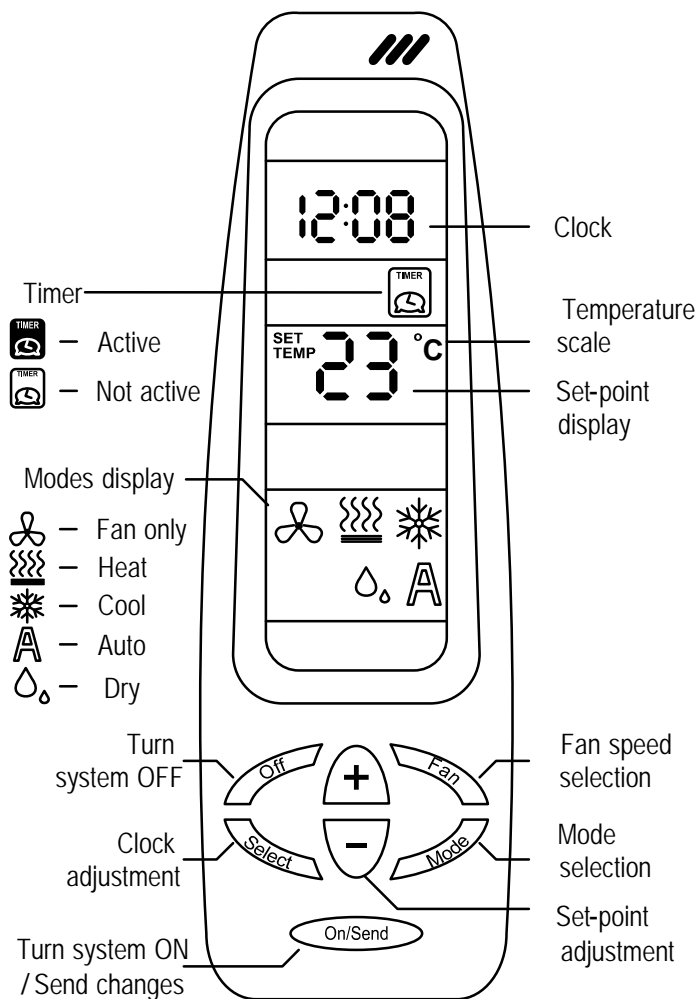

Batteries Replacement

When the batteries are low, the display of the remote control will dim.

If the batteries will not be replaced the display will turn off completely.

Batteries replacement:

- Pull the batteries cover down to reveal the batteries.
- Remove the old batteries.
- **Wait for 10 minutes before installing the new batteries.**
- Install two new AAA batteries – Pay attention to the polarity.
- Return the batteries cover to place.

Important: The remote control will not operate unless at least 10 minutes pass between removing the old batteries and installing the new ones.

Real Time Clock and Day

- Press the "Select" button – "CLOCK SET" will flash.
- Press the (+) or (-) buttons - the hours will flash.
- Adjust the hours using the (+) or (-) buttons.
- Press the "Select" again - minutes will flash.
- Adjust the minutes using the (+) or (-) buttons.
- Press the "Select" again to return to normal display.
- Press the "On/Send" button to send information to the thermostat.

Timer

Start Time:

- Press the "Select" button twice – "PROGRAM & START" will flash on display.
- Press the "Select" button - the hours will flash.
- Adjust the hours using the (+) or (-) buttons.
- Press the "Select" button - the minutes will flash.
- Adjust the minutes using the (+) or (-) buttons.

Stop Time:

- Press the "Select" button – "PROGRAM & STOP" will flash on display.
- Press the "Select" button - the hours will flash.
- Adjust the hours using the (+) or (-) buttons.
- Press the "Select" button - the minutes will flash.
- Adjust the minutes using the (+) or (-) buttons.
- Press the "Select" button - the TIMER will blink
- Select TIMER ON (black icon) or OFF (white icon) using the (+) or (-) buttons.
- Press the "On/Send" button to send the information to the thermostat.

Heating Configuration

- Select Heat mode to start heating using compressor and heat pump (Valve not active).
- Select Dry mode to start heating using the heating valve (Compressor and heat pump not active).



Tel: +972-3-9626462

Fax: +972-3-9626620

e-mail: support@meitavtec.com